


**NOTES:**

The flat head machine bolt allows support of the first girt to the column while the second girt is being nested with the first girt and attached.

The girt attached with the flat head machine bolt **MUST** be installed with the **LARGE** flange against the outside flange of the column and must be installed in alternating bays for the girts to nest.

The flat head will be sandwiched between girts when the connection is complete.

 <p>P.O. BOX 130819 • TYLER, TEXAS 75713</p>	ERECTION STANDARDS	DRAWING <b>ES-132</b>
	LAPPED GIRT INSTALLATION	